


SPOOL DIRECTIONAL VALVE (Direct-Acting)



(3-Way, 2-Position, Manual Operation, Flow Between Ports ② and ③)

Ordering Code: **DT-11A-X-Y-Z**

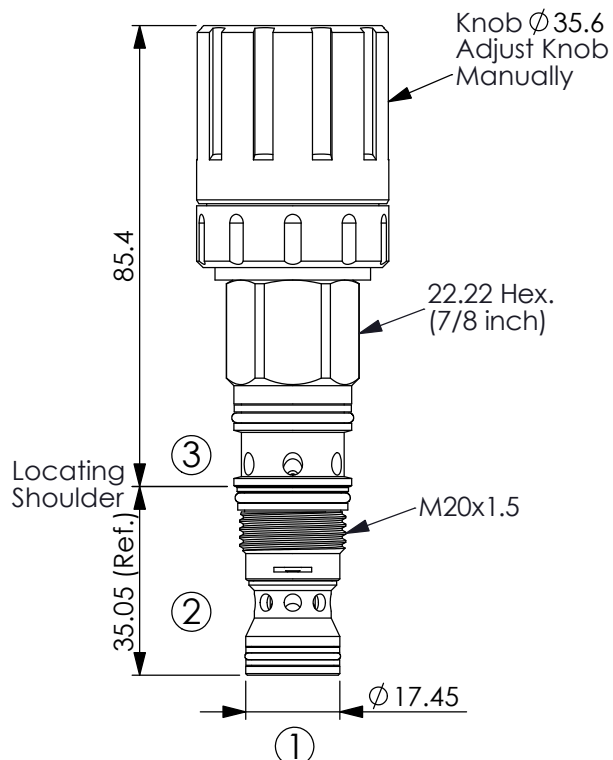


UNIT:mm

Illustrations / detail are for reference only. Data subject to change.

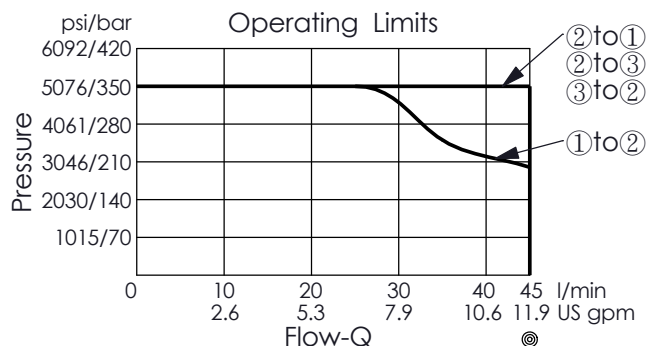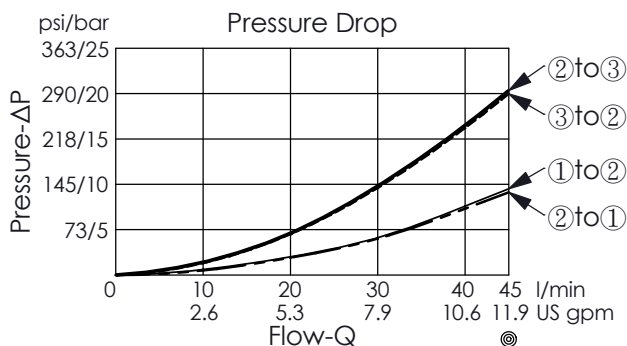

The performance curve or data is only for reference, as customers' using condition, pressure, flow, hydraulic fluid viscosity, cleanliness, temperature and so on are different, the curve or data will be different.

Y	OPERATION
14	Spool, 3-Way, 2-Position, Flow Between Ports ① and ②, All Ports Open in Transition, Manual operation, Flow Between Ports ② and ③

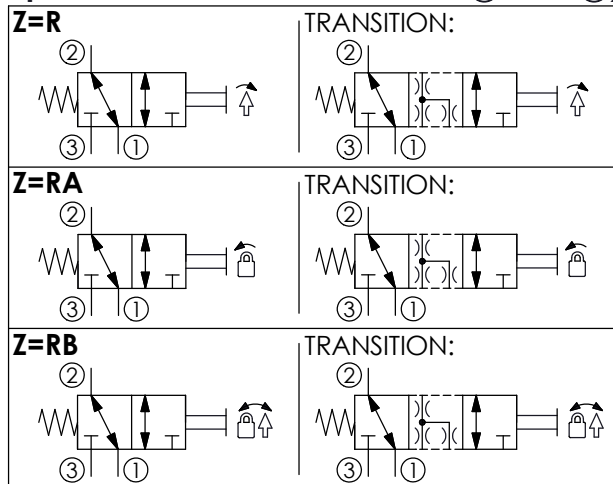

TECHNICAL DATA

Max. Operating pressure: 350 bar
(Refer To Performance Chart)

Rated flow: 45 l/min
(Refer To Performance Chart)

Cavity-Tooling: 11A-3

Installation torque: 40 - 50 Nm

Weight: 0.255 kg

Please refer to the J.990.115.E directional valves manual override knob instructions:

Z=R type:

Turn knob clockwise to achieve override function. Knob will return to starting position automatically when release.

Z=RA type:

Turn knob counterclockwise to locked position (fixed position) to achieve override function. Turn knob clockwise to release, then knob will return starting position.

Z=RB type:

Combining the operation of R type and RA type to achieve override function by turning knob clockwise or counterclockwise. Please refer to R type and RA type instructions.

***Please note that these operations are for emergency use only and are not intended for load holding application.**

X	STRUCTURE
3A	Standard Type
· Maximum Leakage Approximately (80 cc/min./210 bar)	

Z	OPTIONS
R	Manual Override Knob (Clockwise Operation, Return Automatically when Release)
RA	Manual Override Knob (Counterclockwise Operation, Return Manually when Release)
RB	Dual Manual Override Knob (Clockwise Operation, Return Automatically when Release) (Counterclockwise Operation, Return Manually when Release)